


Parts List for:

110004
110005
110006**Double-acting (Threaded Body)
SWING / PULL CLAMP****Max. Capacity: 365 lbs. Clamping Force (with 1.06" lg. arm) at 5,000 PSI Max.****110004 - Left Hand****110005 - Right Hand****110006 - Straight Pull**

The piston rod
U-cup seal (Item 10)
can be easily
twisted if installed
incorrectly.

Before installing the
piston rod (Item 13)
lubricate the rod and
all seals with
hydraulic oil. Install
the rod with light
pressure and a
twisting motion as the
seal is first contacted.

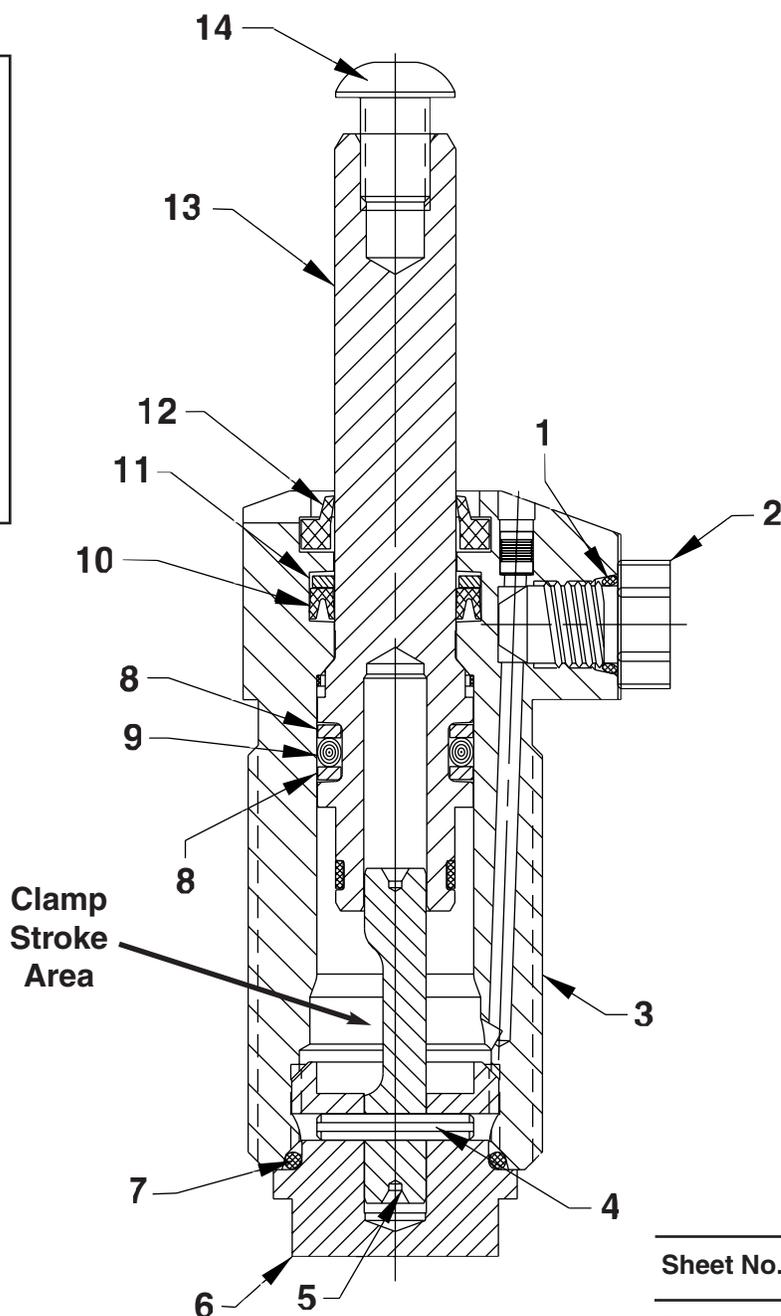

Parts List, Form No. 101870, Back sheet 1 of 1

| Item No. | Part No. | No. Req'd | Description |
|----------|----------|-----------|------------------------------------------------------------|
| 1 | 15189 | 2 | O-Ring (.36 x .23 Nitrile) |
| 2 | 252531 | 2 | Fitting, Plug (5/16-24 Plastic) |
| 3 | 351401 | 1 | Body, Threaded w/Plug |
| 4 | 252877 | 1 | Pin, Spring (.09 x .56) |
| 5 | 351397 | 1 | Cam, Left Hand (Left Hand† 90° for 110004) |
| | 351398 | 1 | Cam, Right Hand (Right Hand† 90° for 110005) |
| | 351399 | 1 | Cam, Straight (Straight Pull for 110006) |
| 6 | 351432 | 1 | Cap, End DA (Torque to 450/470 in. lbs.) |
| 7 | *10527 | 1 | O-Ring (.81 x .64 Nitrile) |
| 8 | *252515 | 2 | Washer, Backup (.49 x .39) |
| 9 | *252505 | 1 | O-Ring (.56 x .38 URE) |
| 10 | *252473 | 1 | U-Cup (.62 x .43 x .09 H) |
| 11 | *252479 | 1 | Washer, Backup (.61 x .43 x .04) |
| 12 | *252453 | 1 | Wiper, Rod (.69 x .44 URE) |
| 13 | 351400 | 1 | Rod, Piston |
| 14 | 251910 | 1 | Screw, Button HD (1/4-20 x 3/8; Torque to 80/100 in. lbs.) |

NOTE: Grease roller in piston rod (Item #13) and cam with a light coating of CDM Extreme Pressure Lube #3.

Part numbers marked with an asterisk (*) are contained in Repair Kit No. 300954.

†Right hand rotation is clockwise rotation when viewed from the piston rod end.

Left hand is counterclockwise rotation. To reverse clamp rotation, order the appropriate rotating cam.

Note: Shaded areas reflect last revision(s) made to this form.

Refer to any operating instructions included with this product for detailed information about operation, testing, disassembly, reassembly, and preventive maintenance.

Items found in this parts list have been carefully tested and selected. **Therefore: Use only genuine Hytec replacement parts!**

Additional questions can be directed to our Technical Services Department.