FOR TORQUE WRENCHES, NUT SPLITTERS & SPREADERS

700 BAR (10,000 PSI) - HIGH PERFORMANCE HYDRAULIC PUMPS

Page **BOLTING PUMP SUMMARY** CHART...70



Page X1E1-PT...80-81 Legacy Series Electric Hydraulic Pump



Page **ISP**

ADVANTAGE...71





Page PE45...72-73 Infinity Series Electric Pump



Page RWP55-BS...84-85 Classic Series Air Hydraulic Pump



Page PA60A...74-75 Infinity Series Air Pump

Page X1A1-PT...86-87 Legacy Series Air Hydraulic Pump



Page PE39...76-77 Compact Torque Wrench Pump



Page P SERIES...88-89 Hand Pumps 700 bar (10,000 psi)



Page PE55TWP-BS...78-79

Classic Series Electric Hydraulic Pump

BOLTING PUMP SUMMARY CHART

Most customers choose to use hand pumps for spreading and nutsplitting applications because of their ability to spread and hold. When using spreaders with torque wrench pumps, use only the top port advance and know that the spreader will retract when the pump is turned off.

						To	orque	or S	plit				Tens
				\$ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \	/5	ઈ//	/,	2000	// 0	, /	30/		
Duaduata hava h	simbon eta alsima lavrala.		/	/ ,	ZQ.	/b)/ b		Sa S
Products have r	nigher stocking levels.	Q		<i>ير \</i>	\	※ //,	જે/હ	o r //{	გ ^ა /	&%,		b /s	5/ 5
		V.	<i>7/6</i> 0		//+	×/\%	708		/ 8	z, +,	T Q	Ĭ/\$	18
	ELECTRIC (110/115V)	X	X	X	X					<u> </u>	X		
POWER SOURCE	ELECTRIC (220/230V)	X	X	X	X						X		
I OWER GOORGE	AIR						Х	Х	Х	Х	 ^	Х	X
	GAS	-				Х					-	^	_
	UNIVERSAL	X	Х	Х	Х	n/a					Х		
ELECTRIC MOTOR TYPE		-				n/a					 ^		
	INDUCTION	Х	X	Х	X		Х	Х	Х	X	-		
MAX PRESSURE	10,000 PSI (700 BAR)	-				X	_			^	X	Х	X
	21,750 PSI (1,500 BAR)	v		V	V	V		V	V	V	_		
PUMP TYPE	TWO-STAGE	Х	X	X	Х	Х	Х	Х	Х	Х	Х		
	INFINITE STAGE (ISP)	+-					^				V		
FLOW RATE	LOW (<20 IN ³ /MIN, <0.33 L/min)	v									Х		
@MAX PRESSURE	MED. (<40 IN ³ /MIN, <0.66 L/min)	X	7.5	7.5			7.7	3.5			-	.,	
@WAX I KLOSUKL	HIGH (<60 IN ³ /MIN, <0.98 L/min))	-	Х	X	X	\ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \	Х	Х	\ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \	Х	-	Х	77
	VERY HIGH (>60 IN ³ /MIN, >0.98 L/min)	1				X			Х		177		Х
SPEED	SLOW	X		7.7				3.5			X	.,	
@MAX PRESSURE	MED	-		X	X			Х		Х	-	Х	
	FAST	-	Х			X	Х		Х		₩.		X
APPLICATION TYPE	ORIGINAL INSTALL	-	X	X	X	X	Х	X	X	X	X	X	X
	OPERATIONS/MRO/SERVICE	X		Х	X			Х		X	X	Х	X
DUTY CYCLE	CONTINUOUS	-	Х	X	Х	X	Х	Х	Х	Х	X	Х	X
5011 01022	INTERMITTENT	X		Х	Х			X		X	X	X	X
# OF PORTS	1	Х	X	X	X	X	Х	X	X	X	_		
(TOOL QUANTITY)	2	_									X	X	X
, ,	4	_	X	X			Х	X	X		_		
	0.5 GAL (1.9 L)	X									_		
	1.0 GAL (3.8 L)										X		
	1.25 GAL (4.7 L)												
OIL TANK OADAOITY	1.5 GAL (5.7 L)		X										
OIL TANK CAPACITY	2.0 GAL (7.6 L)						Х						
	2.5 GAL (9.4 L)			X	Х			X		Х		Х	X
	3.0 Gal (11.3 L)					Х							
	5.0 GAL (18.9 L)								Х				
	SUBSEA (UNDERWATER)												Х
	WIND/UP-TOWER, TIGHT SPACE	Х									Х		
SPECIAL	WIND/FOUNDATION TENSION										X	Х	X
CONSIDERATIONS/	ATEX⟨€x⟩ II 2 GDc T4	1					Х					_ · ·	
LOCATIONS/	Č€	Х	Х			Х	X	Х			Х	Х	X
APPLICALTIONS	AUTO CYCLE		X			<u> </u>							
*	PENDANT INCLUDED	X	X	Х	Х	Х	Х	Х	Х	Х	Х		
	OPTIONAL COOLER AVAILABLE	X	X		^`	'`		X	<u> </u>	<u> </u>			

Virtually any pump may be used for Original Installation or Service. This chart factors pump cost and usage together to determine a total cost of ownership and recommends a pump based upon value delivered.

Pumps designed for torque wrench applications do not hold pressure, they should NOT be used for lifting applications and should be used with caution for spreading applications.




^{*} Please contact factory of authorized reseller with questions about special applications.

The Infinity Stage Pump (ISP) from SPX helps get work done faster. The innovative, patent pending design takes advantage of a continuously variable output that provides maximum flow within the rated pressure range of the pump - from 0 - 700 bar (0 to 10,000 psi). Most torquing and spreading work is done between 70 - 400 bar (1,000 - 6,000 psi), which is where the Infinity Stage Pumps (ISP) provide the most significant advantage over traditional pumps. For example, at 70 bar (1,000 psi) there is 5X as much flow as a traditional two-stage pump. At 275 bar (4,000 psi) there is 2X as much flow as a traditional pump.

THE ISP ADVANTAGE: INCREASED PRODUCTIVITY

The additional flow moves tools faster which allows work to be done quicker and more efficiently. The increased efficiency saves you time – allowing you to get onto your next job sooner and more profitably.

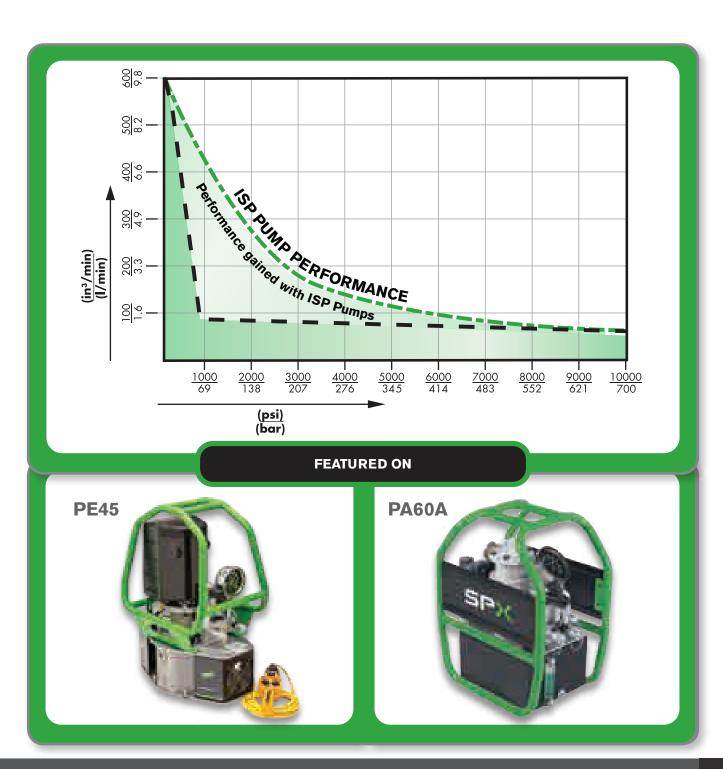

INFINITY SERIES ELECTRIC PUMP

PE45 700 bar/10,000 psi



700 BAR (10,000 PSI) INFINITY SERIES (ISP) ELECTRIC PUMP

The PE45 is an Infinite Stage Electric Pump which increases productivity on the job by providing continuous pressure for up to 2x the speed of typical 2-stage pumps. Jobs get done faster and easier.


Quality means Lower Life-Cycle Costs:

- Over 100,000 cycles
- Continuous duty up to 50°C (122°F) ambient
- Proven design = Proven reliability

Enhanced Usability:

- Light Weight: 32.2 kg (71 lb) [without oil]
- Removable control pendant (5 m/15 ft)
- Removable 100mm (4"), calibration-capable gauge
- Universal Motor for reduced voltage applications (up to -20% nominal voltage)
- 4 tool manifold available powers up to 4 tools from a single pump (not for lifting applications)
- High flow to get work done faster

- Easily adjusted pressure regulator (relief) valve
- Fixed 103 bar (1,500 psi) retract relief valve pressure

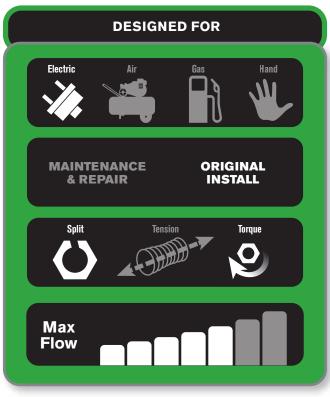



Size (L x W x H): 45 cm x 35.6 cm x 67.5 cm 17.7" x 14.0" x 26.6"

Weight: 32.2 kg (71 lb) [without oil]

Maximum Oil Capacity: (vented reservoir)

6.75 L (1.5 Gallons) [to fill line] 5.1 L (1.12 Gallons) [usable]

Operating Environment:

-25°C to +50°C (-13°F to +122°F)

(When operating near temperature extremes, it is recommended to use hydraulic oils that are rated for those temperatures. Refer to service manual and cooling option)

Sound Level: 87-92 dBA (max)


Pressure: 0 - 700 bar (0 - 10,000 psi)

Typical Flow: 9.4 L/min - 0.8 L/min

(575 in³/min - 48 in³/min)

Power: 1.8 hp Universal Motor 110/115V - 50/60 Hz (17 amps) 220/230V - 50/60 Hz (8.5 amps)

 ϵ

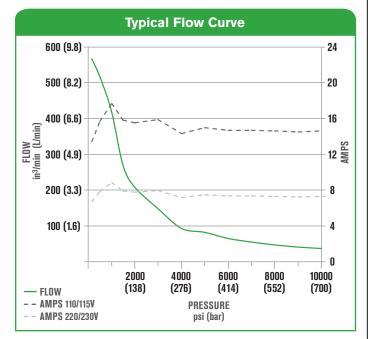

OPTIONS:

Oil Cooling System

4-Port manifold

115V grounded plug pre-installed









Shown with Cooling Option

Ordering Information

PE 45 EE 4 PRS

Power Source

Y = 110/115 VAC w/plug

L = 110/115 VAC w/flying leads (not stocked)

P = 220/230 VAC w/flying leads

Auto Cycle

Blank = No Auto Cycle

A = w/Auto Cycle

Cooling

Blank = w/o cooling

C = w/cooling

- Ports

Blank = 1 port (1 tool)

M = 4 ports (4 tools)

Example: PE45YEE4ACMPRS

PE45 Electric Pump with 110/115 VAC Motor with cord with typical grounded 3 prong plug, with Auto Cycle Feature, with active Cooling reservoir and with 4 ports.

INFINITY SERIES AIR PUMP

PA60A 700 bar/10,000 psi



700 BAR (10,000 PSI) INFINITY SERIES (ISP) AIR PUMP

The PA60A is an Infinity Stage Air Pump which increases productivity on the job by providing continuous pressure for up to 2x the speed of typical 2-stage pumps. Jobs get done faster and easier.

Quality means Lower Life-Cycle Costs:

- Over 100,000 cycles
- Continuous duty up to 50°C (122°F) ambient
- Proven design = Proven reliability


Enhanced Usability:

- Light weight and portable: 34.9 kg (77 lb) [without oil]
 PA60APF5FP
- Light weight and portable: 40.1 kg (88 lb) [without oil]
 PA60APF5FMPR
- Removable control pendant (7.6 m/ 25 ft)
- Removable 100 mm (4"), calibration-capable gauge

- (€

- ATEX ⟨€x⟩ II 2 GDc T4
- 4 port manifold available to power up to 4 tools from a single pump (not for lifting applications)
- Fewer parts for lower service cost

- Easily adjusted pressure regulator (relief) valve
- Fixed 103 bar (1,500 psi) retract relief valve pressure

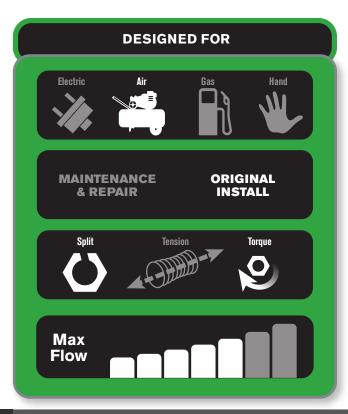





Size (L x W x H): 47 cm x 30 cm x 53 cm 18.6" x 11.8" x 21.0" (PA60APF5FMPR)

Weight:

34.9 kg (76.9 lb) [without oil] PA60APF5FP 36.9 kg (81.5 lb) [without oil] PA60APF5FMP 37.9 kg (83.7 lb) [without oil] PA60APF5FPR 40.0 kg (88.3 lb) [without oil] PA60APF5FMPR

Maximum Oil Capacity: (vented reservoir) 8.5 L (2.2 Gallons) [to fill line] 7.0 L (1.8 Gallons) [usable]

Operating Environment:

-25°C to +50°C (-13°F to +122°F)

(When operating near temperature extremes, it is recommended to use hydraulic oils that are rated for those temperatures. Refer to service manuals and cooling options)

Sound Level: 76 dBA (max)

Pressure: 0 - 700 bar (0 - 10,000 psi) Typical Flow: 9.4 L/min - 0.8 L/min


(575 in³/min - 48 in³/min)

Air: 2.3 m³/min @ 5.5 bar (80 cfm @ 80 psi) 2.5 m³/min @ 6.2 bar (90 cfm @ 90 psi) 2.8 m³/min @ 6.9 bar (100 cfm @ 100 psi)

* Values shown are with filter/regulator/lubricator.

Values will increase without filter/regulator/
lubricator.



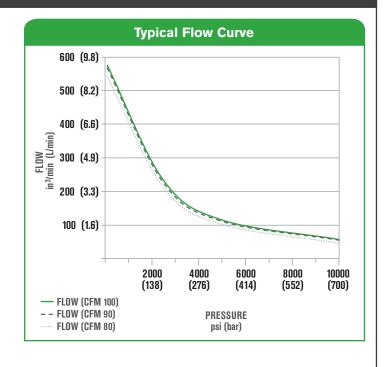

	Hy	draulic Oil Delivery	
	@ 100 cfm	@ 90 cfm	@ 80 cfm
750 psi	575 in³/min	567 in³/min	541 in³/min
51 bar	(9.4 L/min)	(9.3 L/min)	(8.9 L/min)
2,500 psi	233 in³/min	225 in³/min	211 in³/min
175 bar	(3.8 L/min)	(3.7 L/min)	(3.4 L/min)
5,000 psi	115 in³/min	111 in³/min	102 in³/min
350 bar	(1.9 L/min)	(1.8 L/min)	(1.7 L/min)
10,000 psi	57 in³/min	55 in³/min	46 in³/min
700 bar	(0.9 L/min)	(0.9 L/min)	(0.8 L/min)

O	rder	ina l	Info	rm	ati	on
	uci	шэ	ше	ш	аш	OII

Order No. Description

PA60APF5FMP PUMP, ISP 60 CU-IN/MIN, AIR/HYD, 4-PORT

PA60APF5FMPR PUMP, ISP 60 CU-IN/MIN, AIR/HYD 4-PORT, Roll Cage

PA60APF5FP PUMP, ISP 60 CU-IN/MIN, AIR/HYD

PA60APF5FPR PUMP, ISP 60 CU-IN/MIN, AIR/HYD, Roll Cage

COMPACT ELECTRIC TORQUE WRENCH PUMP

PE39 700 bar/10,000 psi



700 BAR (10,000 PSI) COMPACT ELECTRIC TORQUE WRENCH PUMP

The PE39 is compact and capable of being used in a vertical or horizontal orientation. Based on proven pump design for reliability in rugged torque wrench applications to support operation and maintenance requirements.


Quality means Lower Life-Cycle Costs:

- Over 100,000 cycles
- Continuous duty up to 50°C (122°F) ambient
- Proven design = proven reliability

Enhanced Usability:

- Light weight and portable: 17.7 kg (39 lb)
- Removable control pendant (5 m/15 ft cord length)
- Removable 100 mm (4") calibration-capable gauge
- Universal Motor for reduced voltage applications (up to -20% nominal voltage)
- Vertical or horizontal operation
- Easy install cooling fan as option

- Easily adjusted pressure regulator (relief) valve
- Fixed 103 bar (1,500 psi) retract relief valve pressure

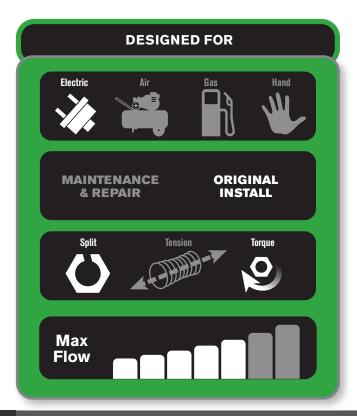



To be used with torque wrenches, pages 10-31

Size (L x W x H): 35 cm x 27.4 cm x 60 cm

13.8" x 10.8" x 23.7"

Weight: 17.7 kg (39 lb) [without Oil]

Maximum Oil Capacity: (non-vented reservoir)

1.9 L (0.5 Gallons) [to fill line] 1.5 L (0.4 Gallons) [usable]

Operating Environment: -25°C to +50°C

(-13°F to +122°F)

(When operating near temperature extremes, it is recommended to use hydraulic oils that are rated for those temperatures. Refer to service manuals and cooling options)

Sound Level: 87 - 92 dBA (max)


Pressure: 0 - 700 bar (0 - 10,000 psi)

Typical Flow: 3.7 L/min - 0.64 L/min


(225 in³/min - 39 in³/min)

Power: 1.3 hp Universal Motor 110/115V - 50/60 Hz (14.5 amps) 220/230V - 50/60 Hz (7.2 amps)

 ϵ

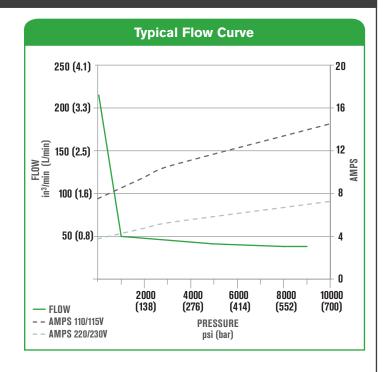



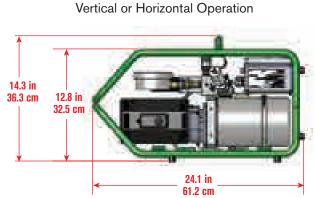

Ordering Information

Order No. Description
PE39YED1PR 110/115VAC

PE39YED1BPR 110/115VAC with cooling option

PE39PED1PR 220/230VAC

PE39PED1BPR 220/230VAC with cooling option

OPTIONS

 Auxiliary Cooling Fan (Field Installable)
 Order No. 3000610

CLASSIC SERIES ELECTRIC HYDRAULIC PUMP

PE55TWP-BS 700 bar/10,000 psi



700 BAR (10,000 PSI) CLASSIC SERIES ELECTRIC HYDRAULIC PUMP

The PE55TWP-BS has been the market leading electric pump for over 30 years & is therefore tried & tested. A simple, light-weight design with a recent upgrade that has created a cost-effective workhorse.


Quality means Lower Life-Cycle Costs:

- Over 100,000 cycles
- Continuous duty up to 50°C (122°F) ambient
- Proven design = Proven reliability

Enhanced Usability:

- Two Speed High Performance pump
- Retract side internal relief valve protects tool
- Hand remote
- Four-tool manifold (-4 models only) allow use of up to four tools simultaneously
- 4" calibration capable gauge
- Use with single or double acting tools

- Easily adjusted pressure regulator (relief) valve
- 103 bar (1,500 psi) pressure retract relief valve

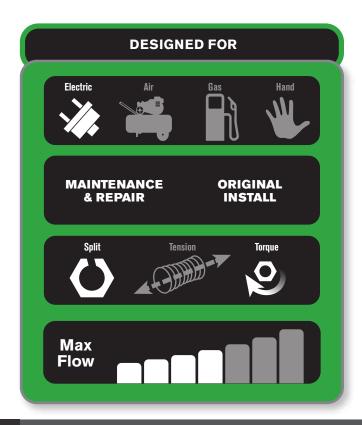

Size (L x W x H): 147 cm x 24 cm x 49 cm

18.5" x 9.5" x 19.2"

Weight: 29.5 kg (65 lb) [without oil]

Maximum Oil Capacity: (vented reservoir)

6.8 L (1.8 Gallons) [to fill line] 5.3 L (1.4 Gallons) [usable]

Operating Environment: -25°C to +50°C

 $(-13^{\circ}F \text{ to } + 122^{\circ}F)$

(When operating near temperature extremes, it is recommended to use hydraulic oils that are rated for those temperatures. Refer to service manuals and cooling options)


Sound Level: 87-92 dBA (max)

Pressure: 0 - 700 bar (0 - 10,000 psi)

Typical Flow: 11.5 L/min - 0.9 L/min

(704 in³/min - 56 in³/min)

Power: 1-1/8 hp Universal Motor 110/115V - 50/60 Hz (25 amps) 220/230V - 50/60 Hz (13 amps)

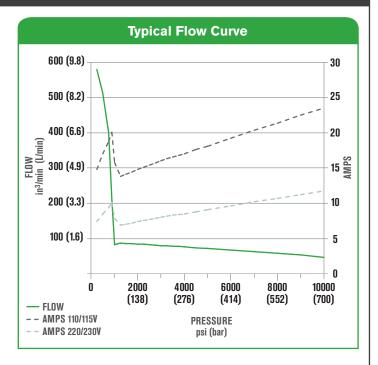

Order No.	Oil Delivery	Oil Reservoir	Usable Oil Overall Width		Overall Length	Overall Height	Pump Weight w/Oil
	per min.	gal	in³				
PE55TWP-BS PE55TWP-220-BS	704 in³ @ 100 psi 11.5 L/min @ 6.9 bar 56 in³ @ 10,000 psi 0.9 L/min @ 700 bar	2.5	324	17.14" 435 mm	9.5" 241 mm	18.12" 460 mm	75 lb 34 kg
PE55TWP-4-BS PE55TWP-4-CF-BS PE55TWP-4-220-BS	704 in ³ @ 100 psi 11.5 L/min @ 6.9 bar 56 in ³ @ 10,000 psi 0.9 L/min @ 700 bar	2.5	324	18.49" 470 mm	9.5" 241 mm	19.15" 487 mm	78 lb 35.5 kg

	Electrical Data											
	Electric Motor	Electrical Control										
PE55TWP-BS PE55TWP-4-BS PE55TWP-4-CF-BS	1-1/8 hp, 12000 rpm 110/150V, 50/60Hz, 25 amps	Remote control with 20-foot cord										
PE55TWP-220-BS PE55TWP-4-220-BS	1-1/8 hp, 12000 rpm 220/230V, 50/60Hz, 13 amps											

Ordering Information

Order No. Description

PE55TWP-BS 110/115V, 50/60 Hz, Single Tool **PE55TWP-4-BS** 110/115V, 50/60 Hz, 4 Tool

PE55TWP-4-CF-BS 110/115V, 50/60 Hz, 4 Tool, with Cooling Fan

PE55TWP-220-BS 220/230V, 50/60 Hz, Single Tool **PE55TWP-4-220-BS** 220/230V, 50/60 Hz, 4 Tool

Contact factory for CE pump options

LEGACY SERIES ELECTRIC HYDRAULIC PUMP

X1E1-PT 700 bar/10,000 psi





700 BAR (10,000 PSI) CLASSIC SERIES ELECTRIC HYDRAULIC PUMP

The original electric pump! Features a simplified electrical control box and a proven, reliable design.

Typically sold to customers that already have a fleet of similar pumps.


Quality means Lower Life-Cycle Costs:

- Over 100,000 cycles
- Continuous duty up to 50°C (122°F) ambient
- Proven design = Proven reliability

Enhanced Usability:

- Power Team, two-speed high performance, PE55 base pump
- Retract side internal relief valve protects tool
- 4-way 2-position solenoid valve standard
- Use with single or double acting tools, not for lifting applications
- Hand remote standard

- Easily adjusted pressure regulator (relief) valve
- Fixed 103 bar (1,500 psi) pressure retract relief valve

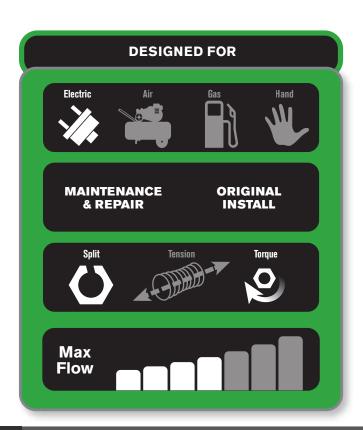

Size (L x W x H): 35 cm x 33 cm x 46 cm

13.9" x 13.1" x 18.1"

Weight: 35.3 kg (78 lb) [without oil]

Maximum Oil Capacity: (vented reservoir)

6.8 L (1.8 Gallons) [to fill line] 5.3 L (1.4 Gallons) [usable]

Operating Environment: -25°C to +50°C

(-13°F to +122°F)

(When operating near temperature extremes, it is recommended to use hydraulic oils that are rated for those temperatures. Refer to service manuals and cooling options)


Sound Level: 87-92 dBA (max)

Pressure: 0 - 700 bar (0 - 10,000 psi)

Typical Flow: 11.5 L/min - 0.9 L/min

(704 in³/min - 55 in³/min)

Power: 1-1/8 hp Universal Motor 110/115V - 50/60 Hz (25 amps) 220/230V - 50/60 Hz (13 amps)

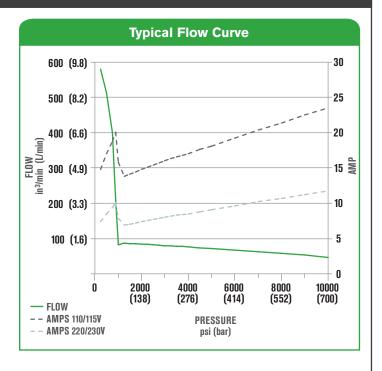

	Oil Delivery	Oil Reservoir Usable Oil		Overall Width	Overall Length	Overall Height	Pump Weight w/Oil	
Order No.	per min.	gal	in³	in	in	in	lb	
		L L		cm	cm	cm	kg	
X1E1-PT	55 in³ @ 10,000 psi	2.5	324	13.9	13.1	18.1	90	
AIEI-PI	0.9 L @ 700 bar	9.5	5.3	35	33	46	41	

	Electrical Data										
	Electric Motor	Electrical Control									
X1E1-PT	1-1/8 hp, 12000 rpm 110/115V, 50/60 Hz, 25 amps	Remote control with 20-foot cord									

Ordering Information

Order No. Description

X1E1-PT 110/115V, 50/60 Hz, Single Tool X1E2-PT 220/230V, 50/60 Hz, Single Tool

81

CLASSIC SERIES GAS HYDRAULIC PUMP

PG120TWP 700 bar/10,000 psi



700 BAR (10,000 PSI) CLASSIC SERIES GAS HYDRAULIC PUMP

Gasoline powered pump for use in remote locations where electricity or compressed air are not readily available.

Operates on a powerful 5.5 hp Honda OHV-type engine.

Quality means Lower Life-Cycle Costs:

- High quality, reliable gasoline engine
- Continuous duty
- Proven design = proven reliability

Enhanced Usability:

- Air cooled 4-stroke engine
- Uses standard unleaded gasoline
- Large capacity, multi-chamber exhaust system to reduce noise

- Fixed 48 bar (700 psi) Unload Valve
- Frame allows for easy two man carry



21.25" x 19.75" x 23"

Weight: 55 kg (121 lb) [without oil]

Maximum Oil Capacity: (vented reservoir)

10.2 L (2.7 Gallons) [to fill line] 9.4 L (2.5 Gallons) [usable]

Operating Environment: -25°C to +50°C

(-13°F to +122°F)

(When operating near temperature extremes, it is recommended to use hydraulic oils that are rated for those temperatures. Refer to service manuals and cooling options)


Sound Level: 85-92 dBA (max)

Pressure: 0 - 700 bar (0 - 10,000 psi) Typical Flow: 7.87 L/min - 2.13 L/min

(480 in³/min - 130 in³/min)

Power: 5.5 hp Honda OHV-Type Gasoline

Engine, 3600 rpm

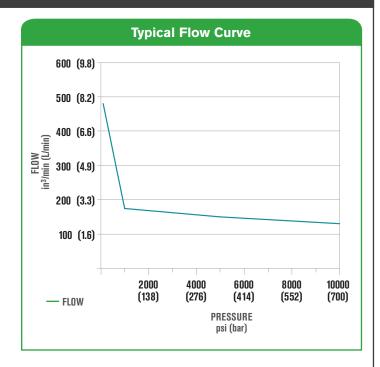

Order No.	Oil Delivery	Oil Reservoir	Usable Oil	Overall Width		Overall Length		Overall Height		Pump Weight w/Oil	
	per min.	gal	in³	in	cm	in	cm	in	cm	lb	kg
PG120TWP	480 in³ @100 psi	3	572	19.75	50	21.25	54	23	59	126	57.2

Ordering Information

Order No. Description

PG120TWP Gasoline Pump, Single Tool

CLASSIC SERIES AIR HYDRAULIC PUMP

RWP55-BS 700 bar/10,000 psi



700 BAR (10,000 PSI) CLASSIC SERIES AIR HYDRAULIC PUMP

The RWP55-BS has been the market leading pump for over 30 years & is therefore tried & tested. A simple, light-weight design with a recent upgrade that has created a cost-effective workhorse.


Quality means Lower Life-Cycle Costs:

- Over 100,000 cycles
- Continuous duty up to 50°C (122°F) ambient
- Proven design = Proven reliability

Enhanced Usability:

- Powerful 3 hp motor starts under load
- Retract side internal relief valve protects tool
- Use with single or double acting tools. Not for lifting applications
- 4" calibration capable gauge

- Easily adjusted pressure regulator (relief) valve
- Has a retract port pressure selector 1,500 or 10,000 psi

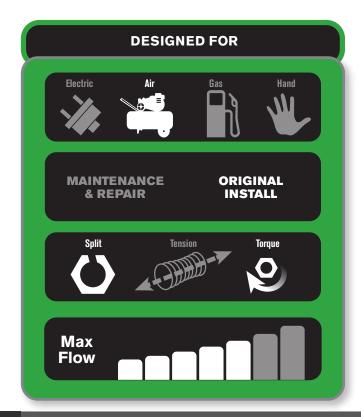

Size (L x W x H): 42 cm x 24 cm x 50 cm

16.6" x 9.5" x 19.8"

Weight: 38 kg (84 lb) [without oil]

Maximum Oil Capacity: (vented reservoir)

6.8 L (1.8 Gallons) [to fill line] 5.3 L (1.4 Gallons) [usable]

Operating Environment: -25°C to +50°C

(-13°F to +122°F)

(When operating near temperature extremes, it is recommended to use hydraulic oils that are rated for those temperatures. Refer to service manuals and cooling options)

Sound Level: 85-92 dBA (max)

Pressure: 0 - 700 bar (0 - 10,000 psi)

Typical Flow: 7.6 L/min - 0.9 L/min


(465 in³/min - 55 in³/min)

Air: 1.4 m³/min @ 5.5 bar (50 cfm @ 80 psi) 1.65 m³/min @ 6.2 bar (58 cfm @ 90 psi) 1.89 m³/min @ 6.9 bar (67 cfm @ 100 psi)

* Values shown are with filter/regulator/lubricator.

Values will increase without filter/regulator/
lubricator.



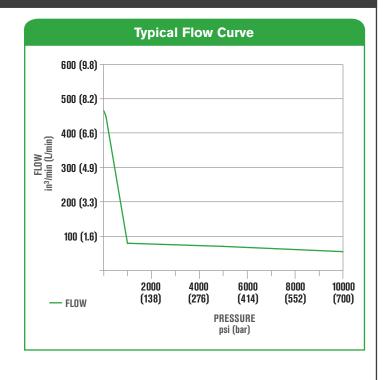

Order No.		Oil Delivery	Oil Reservoir	Usable Oil	Overall Width	Overall Length	Overall Height	Pump Weight w/Oil
ı		per min	gal	in³	in	in	in	lb
ı	RWP55-BS	465 in³ @ 100 psi	2.5	324	16.55	9,5	19.83	98
ı	กพรวจ-อจ	55 in³ @ 10,000 psi	2.3	J2 4	10.00	5.0	19.00	30
I	RWP55-4-BS	465 in³ @ 100 psi	0.5	004	10.55	0.5	10.02	98
	(4-tool manifold)	55 in³ @ 10,000 psi	2.5	324	16.55	9.5	19.83	30

	Мс	otor Data							
Air Motor Air Control									
RWP55-BS	3 hp, 50 cfm @ 80 psi	Pneumatic remote control with 25-foot cord							

Ordering Information

Order No. Description

RWP55-BS Air Pump, Single tool

RWP55-BS-R Air Pump, Single tool, with roll cage

RWP55-4-BS Air Pump, 4 tool

RWP55-4-BS-R Air Pump, 4 tool, with roll cage

LEGACY SERIES AIR HYDRAULIC PUMP

X1A1-PT 700 bar/10,000 psi



700 BAR (10,000 PSI) CLASSIC SERIES AIR HYDRAULIC PUMP

The original air pump! Features a proven, reliable design. Typically sold to customers that already have a fleet of similar pumps.


Quality means Lower Life-Cycle Costs:

- Over 100,000 cycles
- Continuous duty up to 50°C (122°F) ambient
- Proven design = Proven reliability

Enhanced Usability:

- Power Team, two-speed high performance, PA55 base pump
- Retract side internal relief valve protects tool
- 4-way 2-position air pilot valve standard
- Use with single or double acting tools. Not for lifting applications.
- Hand remote standard

- Easily adjusted pressure regulator (relief) valve
- Fixed 103 bar (1,500 psi) pressure retract relief valve

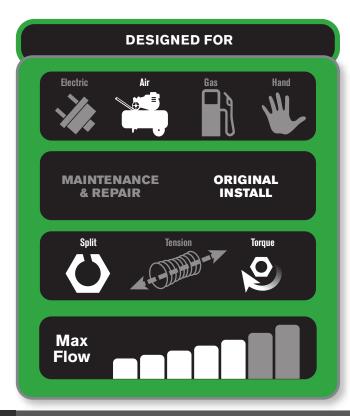



10.8" x 18" x 18.8"

Weight: 34 kg (75 lb) [without oil]

Maximum Oil Capacity: (vented reservoir)

6.8 L (1.8 Gallons) [to fill line] 5.3 L (1.4 Gallons) [usable]

Operating Environment: -25°C to +50°C

(-13°F to +122°F)

(When operating near temperature extremes, it is recommended to use hydraulic oils that are rated for those temperatures. Refer to service manuals and cooling options)

Sound Level: 85-92 dBA (max)

Pressure: 0 - 700 bar (0 - 10,000 psi)


Typical Flow: 7.6 L/min - 0.9 L/min

(465 in³/min - 55 in³/min)

Air: 1.4 m³/min @ 5.5 bar (50 cfm @ 80 psi) 1.65 m³/min @ 6.2 bar (58 cfm @ 90 psi) 1.89 m³/min @ 6.9 bar (67 cfm @ 100 psi)

* Values shown are with filter/regulator/lubricator.

Values will increase without filter/regulator/
lubricator.

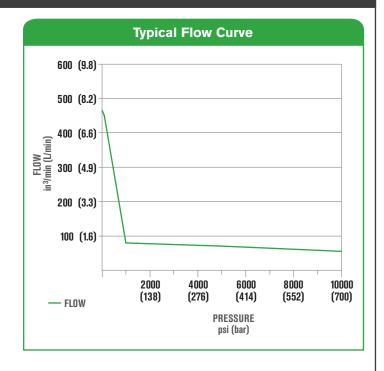

Order No.	Oil Delivery	Oil Reservoir Usable Oil		Overall Width	Overall Length	Overall Height	Pump Weight w/Oil
	per min.	gal	in³	in	in	in	lb
X1A1-PT	465 in³ @ 100 psi	2.5	324	10.75	18	18.75	89
AIAI-PI	55 in³ @ 10,000 psi	L. 2	324	10.70	10	10.70	09

Ordering Information

Order No. Description

X1A1-PT Air Pump, Single tool

HAND PUMPSHYDRAULIC P SERIES

700 bar/10,000 psi







PUMP AUTOMATICALLY SHIFTS INTO THE HIGH PRESSURE STAGE UPON CONTACT WITH THE LOAD.

- All metal construction won't burn through in welding environments.
- Two-speed reduces handle strokes so you work faster and easier.
- Convenient fill port allows pumps to be filled in a horizontal or vertical position.
- Relief valve inboard of check valve prevents loads from drifting down.
- Large valve knob gives added control for slowly metering loads down.

P19L/P59L

- More usable oil volume use with larger or longer stroke cylinders.
- True unloading valve set for 59 bar (850 psi) provides more efficiency and lower handle force.
- Link design reduces handle effort by 40%.
- Durable aluminum reservoir, manifold, and end cap.
- Ergonomic non-slip handle grip provides more comfort.
- Spring loaded handle lock incorporated into handle.

P19/P59/P59F

- Steel reservoir
- Strong lever
- Lower handle effort (measured)
- Higher unloading pressure 22 bar (325 psi)
- Pump is serviceable (all components available)
- Durable aluminum pump head
- No breather opening needed (so no leakage)
- True unloading (more flow/ lower effort)
- Pump mounting holes on front and back
- Solid accurate repeatable Integrated lifting system
- Can be used in welding environment (no plastic)


No coupler included with these pumps.



Operating Environment: -25°C to +50°C (-13°F to +122°F)

(When operating near temperature extremes, it is recommended to use hydraulic oils that are rated for those temperatures. Refer to service manuals and cooling options)

Pressure: 0 - 700 bar (0 - 10.000 psi)

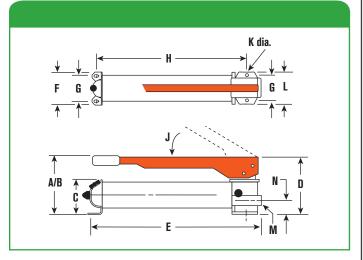

Order No.	A	В	C	D	E	F	G	Н	J	K	L	M	N
Oldol No.	in	in	in	in	in	in	in	in	deg	in	in	in	in
P19	5-1/2	14-5/8	2-7/8	4-9/16	13-11/16	4	3-1/4	11-1/16	53°	5/16	4	3/8 NPTF	1-13/32
P19L	5-1/2	-	-	_	13-11/16	4-1/8	3-1/4	11	40°	5/16	-	3/8 NPTF	-
P59	7	21	3-1/2	5	23	4-1/4	3-1/4	19-3/4	38°	5/16	4-3/4	3/8 NPTF	1-5/8
P59L	7	-	-	_	21	5	3-1/4	19-3/4	50°	5/16	-	3/8 NPTF	-
P59F	3-1/2	16-3/4	3-1/2	6	23-1/4	4-1/4	3-1/4	20-1/4	-	5/16	4-1/2	3/8 NPTF	

Ordering Information											
For Use With	Order No.		Volume & P Volume per Stroke (cu. in.)		Pressure Maximum Pressure (psi)		Reservoir Handle Effort	Oil Capacity	Usable Oil Capacity	Oil Port	Product Weight
		Speed	LP	HP	LP	HP	lb	cu in	cu in	in	lb
Single Acting	P19	2	0.305	0.076	325	10,000	99	24.4	20	3/8 NPTF	6.6
	P19L	2	0.250	0.050	850	10,000	78	29	27	3/8 NPTF	5.1
	P59	2	0.662	0.160	325	10,000	145	55	45	3/8 NPTF	17.2
Tools & Cylinders*	P59L	2	0.720	0.150	850	10,000	104	69	66	3/8 NPTF	8.9
	P59F	2	0.550	0.130	325	10,000	120	55	45	3/8 NPTF	14

LP = Low PressureHP = High Pressure
*Pump includes 2-Way Valve



Foot Pump Conversion Kit

No. FK59 - Foot pump conversion kit for use on P55/P59 pumps. Wt., 6 lb