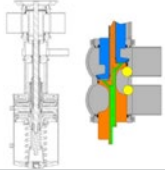
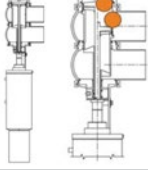
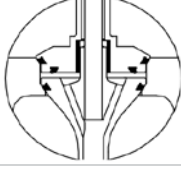

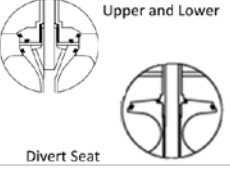
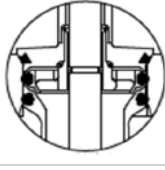
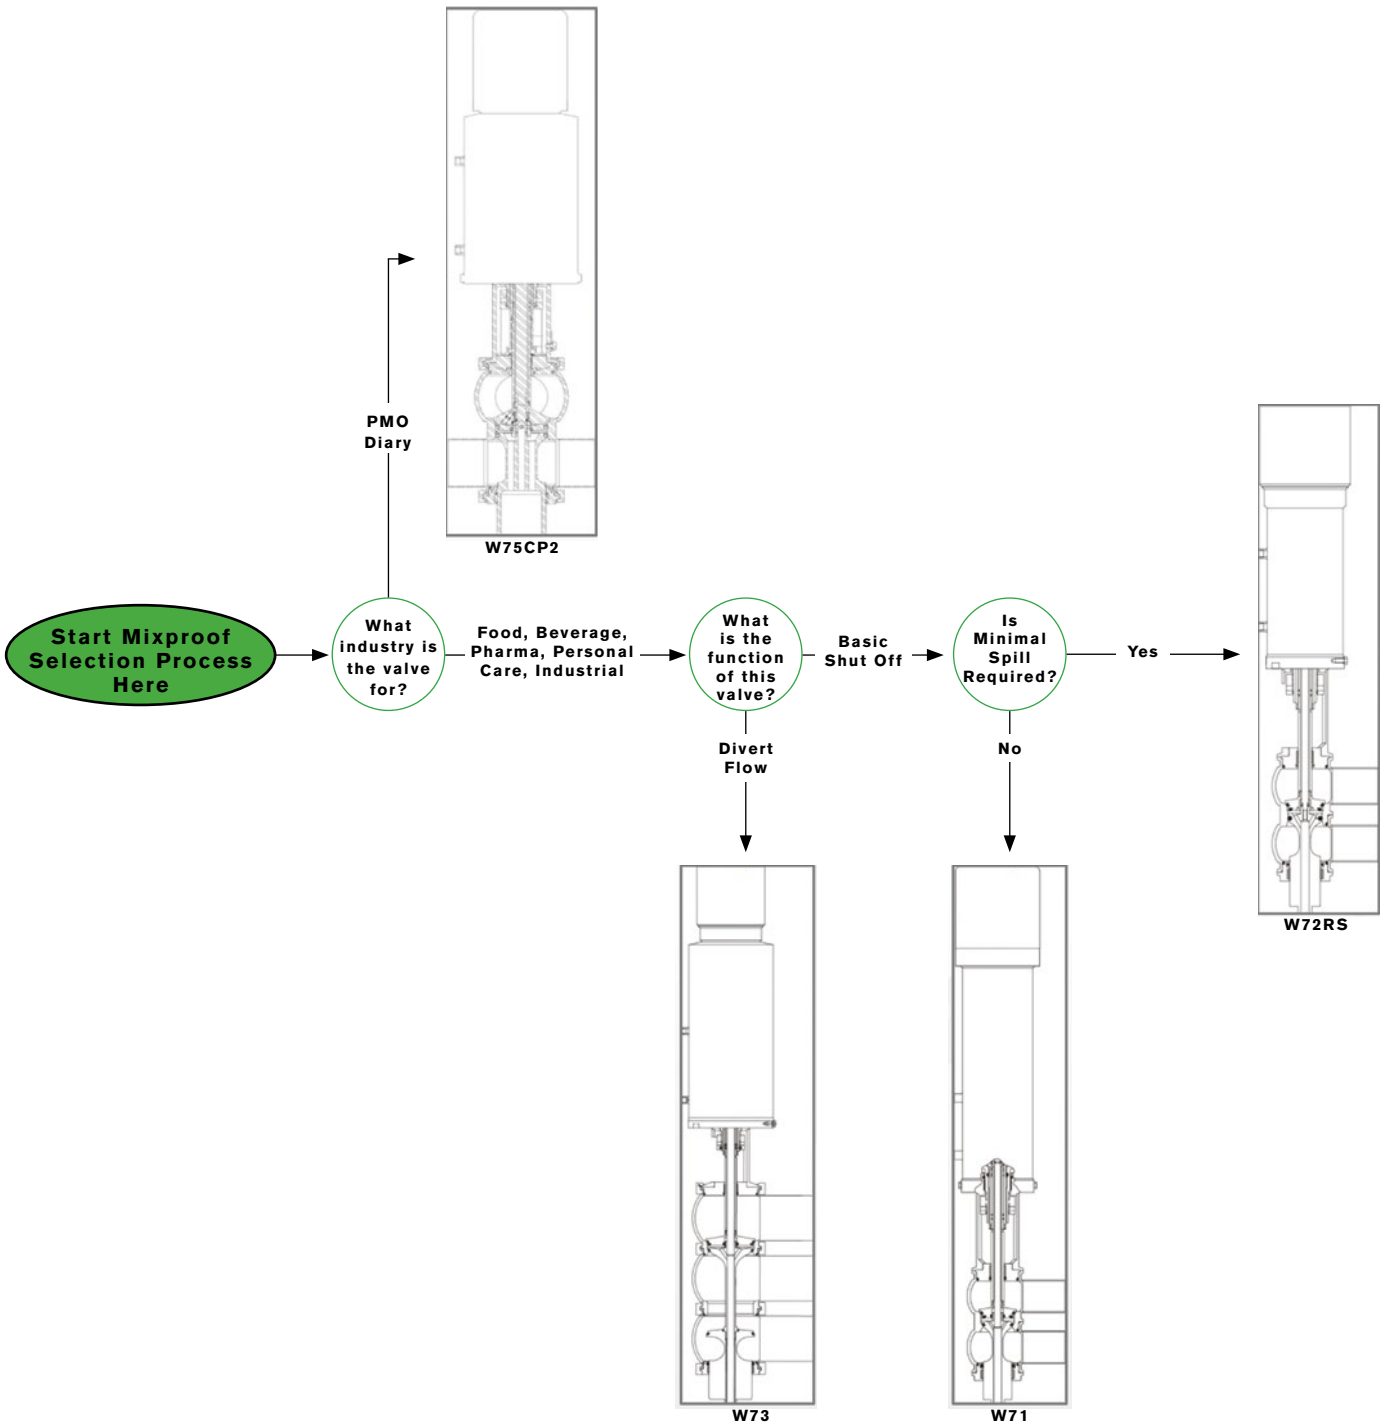


WCB Mix Proof Valve Selection Guide

	W71	W72RS	W73	W75CP
APPLICATION	General purpose shut-off	Minimal spill shut-off	General purpose divert	Minimal spill shut-off requiring PMO compliance for independent seat cleaning while dairy product in opposite housing
INDUSTRIES	Food, Beverage, Brewery, Personal Care, Pharmaceutical, CIP	Food, Beverage, Brewery, Personal Care, Pharmaceutical, CIP	Food, Beverage, Brewery, Personal Care, Pharmaceutical, CIP	Dairy
VARIANTS		W72RS Tank Outlet W72RSP Particulate		W75CP Tank Outlet W75CP Tank Outlet Curd
				
SEAT DESIGN	Double Compression - Tri-ring upper / Tri-ring Vent Cavity Seal / Tri-ring Lower 	Radial Seal - Tri-ring Upper / Tri-ring Vent Cavity Seal / Radial Seal Lower 	Double Compression - Tri-ring upper / Tri-ring Vent Cavity Seal / Tri-ring Lower / Tri-ring Divert 	Tri-ring Upper / O-Ring Spray Blocker / Radial Seal Lower 
SEAT OPTIONS	EPDM/FKM/FFKM Tri-rings TEF-FLOW™ "P" (TFP) - PEEK Seat	EPDM/FKM/FFKM Tri-rings EPDM/FKM/FFKM Radial Seal O-ring	EPDM/FKM/FFKM Tri-rings TEF-FLOW™ "P" (TFP) - PEEK Seat	FKM / EPDM Tri-rings FKM / EPDM Radial Seal O-ring FKM / EPDM Spray Blocker O-ring ** EPDM is not recommended for dairy applications **
OTHER OPTIONS	O-ring Stem Seals Quad-ring Stem Seals Wiping Stem Seals External Flush (Liquid and Steam) Quick Dump Valve Upper Stem Balancer MTR's	O-ring Stem Seals Quad-ring Stem Seals Wiping Stem Seals External Flush (Liquid and Steam) Quick Dump Valve Upper Stem Balancer MTR's	O-ring Stem Seals Quad-ring Stem Seals Wiping Stem Seals External Flush (Liquid and Steam) Quick Dump Valve MTR's	Wiping stem seals only MTR's
COMPETITOR CROSS-REFERENCE	GEA Tuchenhagen Type B and B_L (w/seat lift) Sudmo D600 (SL) & D610 (NSL) Alfa Unique Definox VDCI	GEA Tuchenhagen Type R and R_L (w/seat lift); Type T_R(L) Tank Bottom version Sudmo D620 (SL) & D630 (NSL); Large Particulate & Tank Outlet versions Alfa Unique Basic (NSL), SeatClean (SL), HighClean (NSL, Flush), & UltraClean (SL, Flush); TankOutlet version Definox VDCI leak free	GEA Tuchenhagen Type Y Sudmo D620U	GEA Tuchenhagen Type M 24/7 PMO Sudmo 365it PMO Alfa Unique PMO Plus CP



SPXFLOW

SPX FLOW, Inc. 611 Sugar Creek Road, Delavan, WI 53115

P: (262) 728-1900 or (800) 252-5200, F: (262) 728-4904 or (800) 252-5012

E: wcb@spxflow.com • www.spxflow.com

SPX FLOW reserves the right to incorporate our latest design and material changes without notice or obligation. Design features, materials of construction and dimensional data, as described in this bulletin, are provided for your information only and should not be relied upon unless confirmed in writing. Please contact your local sales representative for product availability in your region. For more information visit www.spxflow.com. The green ">" is a trademark of SPX FLOW, Inc. ISSUED 10/2015 FF-2200

COPYRIGHT © 2015 SPX FLOW, Inc.