OTHER TOOLS

HIGH PERFORMANCE HIGH FORCE HYDRAULICS

Page **ENS...48-49** Hydraulic Nut Splitters



Page
HNS...54
Hydraulic Nut Splitters



Page **HS...55**Hydraulic Spreaders



Page **FLS15...50-53**Hydraulic Flange Spreader



Page **EHN...57** Hydraulic Nut



NUT SPLITTERS

HYDRAULIC - ENS

M20 to M90 (3/4" to 3-1/2") bolt diameter





Double acting (subsea) version comes standard with 700 bar, 1/4" NPT, Push to Connect (PTC) couplers. To use with top side pumps, change out couplers to 700 bar, 1/4" NPT, Screw-to-connect style. See page 102 for coupler details.

ENS HYDRAULIC NUT SPLITTER

Our hydraulic nut splitter offers a reliable and effective solution to the removal of seized and corroded nuts.

- Triple edge replaceable cutting blade
- Blade positioning scale to eliminate bolt damage
- Cutting depth fixed Nut size adjustable via rotating cylinder!
- Size range from M20 to M90 (3/4" to 3-1/2") bolt diameters
- Designed to fit ANSI, ASME B.16.5 flanges
 - Will work with some API flanges contact factory for details
- Twin line hydraulic version available for subsea use
- Versatile, reliable and trouble-free operations
- Operates off a standard 700 bar (10,000 psi) pump unit
- Built-in safety relief valve to protect tool & operator

OK FOR SUBSEA



Ordering Information

TO SPECIFY AN ENS SOLUTION:

- 1. Use the table located on the next page to identify the nut you need to split and select the appropriate head.
- 2. Select a single or double acting cylinder. For subsea applications only select double acting cylinders.
- 3. Order extra cutting blades (optional).

Accessory Ordering Information

Order No. Description

ENSBL010001 Cutting blade for ENS1


ENSBL020001 Cutting blade for ENS2


ENSBL030001 Cutting blade for ENS3 **ENSBL040001** Cutting blade for ENS4



Specifications and Dimensional Data

Pick One Cylinder + One Head

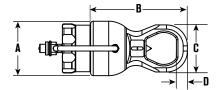

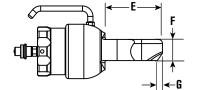

(Tool Reference) Order Numbers

(Tool Re	(Tool Reference) Order Numbers										1 - 0					-7 - 0						
STANDARD	OPTIONAL		Bolt Dia.	Nut A/F	Bolt Dia.	Nut A/F	A	1	E	3	ι	;		D	l	Ē	ا	F	1	G	1	Wt
Standard Cylinder Single Acting	Subsea * Cylinder Double Acting	Head	Metric	mm	Imperial	in	mm	in	mm	in	mm	in	mm	in	mm	in	mm	in	mm	in	kg	lb
			M20	30	3/4"	1-1/4	-															
		ENSAS010002	M22	32	7/8"	1-7/16	104	4.1	228	9.0	76	3.0	18	0.7	104	4.1	40.5	1.6	9	0.4	6.7	14.8
			M24 M27	36 41	I	1-3/8																
FNSAS010001 FNSAS010004			M20	30	3/4"	1-1/4																
ENSAS010001			M22	32	7/8"	1-7/16										4.3						
		ENSAS010003	M24	36	1"	1-3/8	104	4.1	239	9.4	90	3.5	21	0.8	110		40.5	1.6	10	0.4	6.9	15.2
		LINGAGUIUUUG	M27	41	1-1/8"	1-13/16	104	4.1	200	3.4	30	J.J	21	0.0	110	4.0	40.3	1.0	10	0.4	0.0	10.2
			M30	46	1-1/4"	2																
			M33	50 46	1-1/8"	1-13/16																
			M33	50	1-1/4"	1-13/10					.0 102											
		ENSAS020002	M36	55	1-3/8"	2-3/16	138	5.4	i.4 305	5 12.0		4.0	22	0.9	132	5.2	57.5	2.3	6	0.2	15.8	34.8
			M39	60	1-1/2"	2-3/8																
ENSAS020001	ENSAS020004		M30	46	1-1/8"	1-13/16						4.5	5 23	3 0.9	141	5.6	57.5	2.3			16	35.3
LNUAUUZUUUI	LNOAGUZUUU4		M33	50	1-1/4"	2		5.4	314		4 114											
		ENSAS020003	M36	55	1-3/8"	2-3/16	138			12.4									6	0.2		
			M39	60	1-1/2"	2-3/8																
			M42 M45	65 70	1-5/8" 1-3/4"	2-9/16 2-3/4																
		ENSAS030002	M45	70	1-3/4"	2-3/4								8 1.1	189	7.4				0.3	42	92.6
			M48	75	1-7/8"	2-15/16	190	7.5	406	16.0	.0 132	5.2	28				80.5	3.2	8			
			M52	80	2"	3-1/8																
		ENSAS030003	M45	70	1-3/4"	2-3/4						145 5.7	7 30	0 1.2	199	7.8	80.5	3.2	8	0.3	42.5	
			M48	75	1-7/8"	2-15/16	190	7.5	416	16.4	145											93.7
			M52	80	2"	3-1/8																
			M56 M45	85 70	2-1/4" 1-3/4"	3-1/2 2-3/4								11.5 1.2								
			M48	75	1-7/8"	2-15/16																94.8
			M52	80	2"	3-1/8	400				400		04.5						_			
ENSAS030001	ENSAS030006	ENSAS030004	M56	85	2-1/4"	3-1/2	190	7.5	426	16.8	160	6.3	31.5		200	7.9	80.5	3.2	7	0.3	43	
			M60	90	2-1/2"	3-7/8																
			M64	95																		
			M45	70		2-3/4																
			M48	75	1-7/8"	2-15/16																
			M52 M56	80 85	2" 2-1/4"	3-1/8 3-1/2																
		ENSAS030005	M60	90	2-1/4"	3-7/8	190	7.5	437	17.2	174	6.9	35	1.4	204	8.0	80.5	3.2	9	0.4	44	97.0
			M64	95	2-3/4"	4-1/4	1															
			M68	100																		
			M72	105																		
		ENSAS040002	M76	110	2-3/4"	4-1/4	235	93	474	18.7	189	74	36.5	1.4	235	9.3	110.5	4.4	4	0.2	73	160.9
			M80	115	3"	4-5/8	200	0.0	-117	10.1	100		00.0	1.17	230	0.0	110.0	1.7	T	O.L	.0	100.0
ENSAS040001	ENSAS040004		M76	110	2-3/4"	4-1/4																
		ENSAS040003	M80 M85	115 120	3" 3-1/4"	4-5/8 5	235	235 9.3	.3 495	19.5 219	5 219 8.6	9 8.6	6 41	1.6	240	9.4	110.5	5 4.4	3	0.1	75	165.3
	LNO		M90	130	3-1/4"	5-3/8						.b 41		240 9	5.4 1							
			MIJU	IJU	J-1/L	J-J/U																

Order a cylinder and a head to make complete nutsplitter. Cylinders are interchangeable with heads within specific size ranges. Each are sold separately. * Subsea can be use topside.

HYDRAULIC SPREADER

FLS₁5

15 Metric Ton Capacity 700 bar/10,000 psi



FLS15
WITH SERRATED SHOES—WEDGE FULLY OPENED



FLS15-ST
WITH STEPPED SHOES—WEDGE CLOSED

FLS15 HYDRAULIC SPREADER

SPX FLOW Bolting Systems is pleased to introduce the FLS15 hydraulic spreader. This unit is ideal for pipe and flange repair. It can also be used for removing elbows, gasket and metal seal replacement on couplers, heavy equipment maintenance, and many other tasks. The spreader is capable of developing up to 15 metric tons of force, is lightweight, and easy to use due to its ergonomic design.

- 15 metric ton (33,000 pound) wedge-driven spreader
- Jaws fully supported by wedge for excellent durability
- Low friction provided by heavy-duty extended-life lubricant
- Ideal for flanges with narrow gaps only 5 mm (0.2 inches) required for entry
- Very high strength due to special alloy used
- Compact and lightweight design only 287 mm
 (11.28 inches) long at a weight of 3.2 kg (7 pounds)
- Easy to use ergonomically balanced handle (optional)
- Suitable for the offshore environment due to superior corrosion resistance
- Quick adjustments for various tasks due to interchangeable shoes (both stepped and serrated)
- Easy and quick maintenance Only T40 Torx tool required
- Includes female half coupler mates to standard 3/8" male half coupler (No. 9798)
- Both serrated- and stepped-shoe versions available



This hydraulic spreader operates using the integrated wedge concept. It is ideal for creating space for flange surface cleaning and repair, and for gasket replacement. The spreader is single-acting, and should be used with a hydraulic pump capable of holding pressure. Maximum operating pressure is 700 bar (10,000 psi).


Spreading Force:


Maximum 15 metric tons (33,000 lb) per tool at 700 bar (10,000 psi). It is recommended that the tools be used in pairs, providing a maximum combined force of 30 metric tons (66,000 lb).

Typical Applications:

- Pipe and flange repair
- Removing elbows
- Couplers gasket and metal seal replacement
- Heavy equipment maintenance

Specifications and Dimensional Data

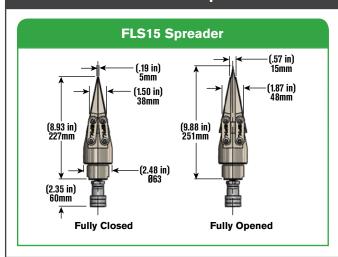

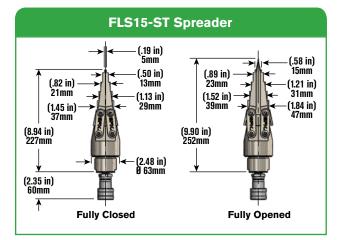

Order No.	Maximum Spreading Force	Minimum Tip Clearance	Maximum Tip Spread	Spreader Type	Oil Capacity	Weight	Maximum Operating Pressure
FLS15 or FLS15-ST	15 Metric Tons (33,000 Pounds)	5 mm (0.197 Inches)	15 mm (0.59 Inches)	Hydraulic	16 cc (1 Cubic Inch)	3.2 kg (7 Pounds)	700 bar (10,000 psi)

Available FLS15 Accessories







Stepped Shoe Part Number 2008083*



Serrated Shoe Part Number 2008082*



Stepped Block Part Number SB15

*Two shoes required per spreader.

Recomm	Recommended Components											
Description	Part Number (Europe)	Part Number (Americas & Asia)										
Two Speed, Single-Acting Hand Pump	P19L	P19L										
Hydraulic Hose Assembly	9764E	9764										
Pressure Gauge	9040E (Primary Units = bar)	9040 (Primary Units = psi)										
Gauge Adapter	9670	9670										
Coupler (male half coupler)	9798	9798										
2 Station Manifold with Needle Valves	9642	9642										
Female Half Coupler	9796	9796										
Male Connector, 3/8	9682	9682										

HYDRAULIC SPREADER KIT

FLS15 KIT (TOPSIDE CASE)

15 Metric Ton Capacity 700 bar/10,000 psi



*The speader kit is available in various combinations, with a standardduty case that is easy to transport.

FLS FLANGE SPREADER KIT

- Standard duty blow molded case organizes and protects the complete spreading kit
- Extra storage space for additional step shoes and up to 3 step blocks
- 15 metric ton wedge-driven spreader
- Jaws fully supported by wedge for excellent durability



	FLS15 KIT (TOPSIDE CASE)														
			Order No												
Kit Co	omponents	FLS15-FBK	FLS15-MBK	FLS15-FBK-ST	FLS15-MBK-ST	FLS15-FBP	FLS15-MBP	FLS15-FBP-ST	FLS15-MBP-ST						
Component	Description	CE	CE	CE	CE										
FLS15	Spreader, Hydraulic	2	1	-	-	2	1	-	-						
FLS15-ST	Spreader, Hydraulic Stepped	-	-	2	1	-	-	2	1						
SB15	Aluminum Holding Block	2	3	2	3	2	3	2	3						
P19L	Lightweight Hand Pump	1	1	1	1	1	1	1	1						
Manifold Assy	Manifold, 2 Needle Valve Assembly (Incl. 2 Gauges)	1	-	1	-	1	-	1	-						
2008410	Handle for FLS15	2	1	2	1	2	1	2	1						
2008650	Standard Case	1	1	1	1	1	1	1	1						

FLS FLANGE SPREADER KIT

- Heavy duty case is more rugged and compact, ideal for offshore applications
- Weather proof gasket seal and pressure equalization valve
- Tighter product spacing for easier helicopter transport
- 15 metric ton wedge-driven spreader
- Jaws fully supported by wedge for excellent durability
- All kits are CE rated.



HYDRAULIC SPREADER KIT

FLS15 KIT (OFFSHORE CASE)

15 Metric Ton Capacity 700 bar/10,000 psi



*Speader kit in various combinations available, all in a heavy duty cases; easy to transport and stock.

	FLS15 KIT (OFFSHORE CASE)										
			Order No								
Kit Com	ponents	FLS15-FSK	FLS15-FSK-ST	FLS15-MSK	FLS15-MSK-ST						
Component	Description	Spreader kit Tandem, Serrated	Spreader kit Tandem, Stepped	Spreader only kit, Serrated	Spreader only kit, Stepped						
FLS15	Spreader, Hydraulic	2	-	1	-						
FLS15-ST	Spreader, Hydraulic Stepped	-	2	-	1						
SB15	Aluminum Holding Block	2	2	1	1						
P19L	Lightweight Hand Pump with Gauge	1	1	-	-						
3000827	Manifold, 2 Needle Valve Assembly (Incl. 2 Gauges)	2	2	-	-						
2008577	Heavy Duty Case, Large	1	1	-	-						
3000832	Heavy Duty Case, Small	-	-	1	1						

NUT SPLITTERS

HYDRAULIC - HNS

15 & 25 Ton Capacity 700 bar/10,000 psi







HNS150A



HNS225


HNS HYDRAULIC NUT SPLITTER


- "Dial-in" feature on HNS150 makes adjustment of splitter simple, without the worry of damaging the bolt
- Specially designed "tool steel" cutter blade penetrates the nut to the precise point where it cracks, stopping short of the bolt threads
- Nut splitter features a dramatically improved cutter blade with an 800% greater resistance to chipping and breaking over previous models
- All models feature a rugged one-piece cutting frame coupled to a heavy-duty hydraulic cylinder
- Compact size allows you to use it in confined areas where it will delivers enough force to split the toughest "fused" or rusted-on grade 2H nuts
- Simply split nut on one side, spin nut splitter 1/2 turn and make second cut on opposite side; nut separates into halves for easy removal
- Uses a standard 3/8" high flow coupler



Align mark on cutter blade with scale.

Specifications and Dimensional Data

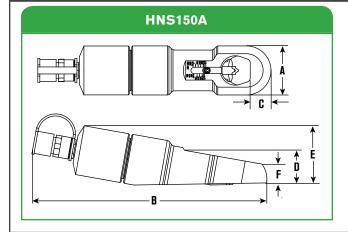

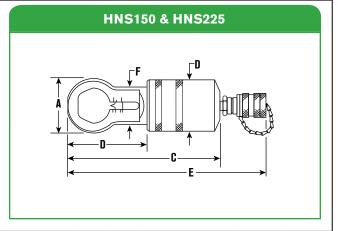

Tool Model	A		В		C		D		E		F		HEAD THICKNESS		REPLACEMENT	TOOL Wt	
IUUI IVIUUEI	mm	in	mm	in	mm	in	mm	in	mm	in	mm	in	mm	in	BLADE	kg	lb
HNS150	73	2.875	86	3.375	200	7.875	70	2.75	264	10.375	52	2.0625	25	1	308840	3.7	8.1
HNS150A	77	3.02	361	14.2	26	1.03	54	2.11	94	3.7	29	1.16	25	1	351985	7.2	15.8
HNS225	108	4.25	152	6	365	14.375	98	3.875	N/A	N/A	83	3.25	38	1.5	308022	13.2	29

		CAPACITIES (by Nut Grade)	
Order No.	2 or A	5 or B	8 or C	2H
	in. hex	in hex	in hex	in hex
HNS150	1/2 - 1-1/2	1/2 – 1- 1/2	1/2 - 1-5/16	1/2 - 1-1/8
HNS150A	1/2 - 1-1/2	1/2 - 1-1/2	1/2 - 1-5/16	1/2 - 1-1/8
HNS225	1-1/8 - 2-1/4	1-1/8 - 2-1/4	1-1/8 - 2-1/4	1-1/8 - 1-11/16

HS HYDRAULIC SPREADERS

- Often used to position and align heavy pipes and flanges for easier bolting.
- Conforms to ASME B30.1 standard.
- High strength alloy steel forged upper and lower jaws on HS2000.
- Jaws are spring-return; retract automatically when pressure is released.
- Uses a standard 3/8" high flow coupler



HS

1-1/2 Short Tons 700 bar/10,000 psi

700 bar





Specifications and Dimensional Data

HS2000 SPECIFICATIONS

Maximum Rated Capacity: 0.91 metric tons @ 690

bar (1 short ton @ 10,000 psi)

Maximum Spread: 101 mm (4")

Minimum Clearance Required: 14.3 mm (9/16")

Oil Required: 10.3 mL (0.63 in³)

HS3000 SPECIFICATIONS


Maximum Rated Capacity: 1.36 metric tons @ 690


bar (1-1/2 short ton @ 10,000 psi)

Maximum Spread: 292 mm (11-1/2")

Minimum Clearance Required: 31.8 mm (1-1/4")

Oil Required: 57.4 mL (3.50 in³)

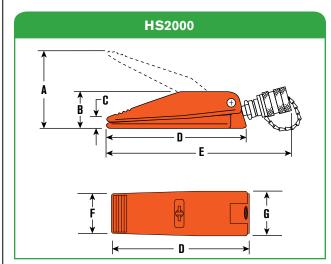

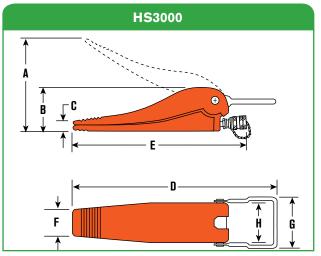

Order	Capacity	A B		C	D E		F	F G		Oil Capacity	Min. Clearance Required	Wt
Number	metric ton	mm	mm	mm	mm	mm	mm	mm	mm	mL	mm	kg
	(short ton)	(in)	(in)	(in)	(in)	(in)	(in)	(in)	(in)	(cu in)	(in)	(lb)
HS2000	0.91 (1)	101 (4)	50.8 (2)	14.3 (9/16)	176 (6-15/16)	236.5 (9-5/16)	50.8 (2)	57.1 (2-1/4)	_	10.3 (0.63)	14.3 (9/16)	2.2 (4.8)
HS3000	1.36 (1-1/2)	292 (11-1/2)	108 (4-1/4)	30.2 (1-3/16)	511 (20-1/8)	450.9 (17-3/4)	57.1 (2-1/4)	142.9 (5-5/8)	92 (3-5/8)	57.4 (3.5)	31.8 (1-1/4)	10 (22)

Value(s) shown in short tons (2,000 lb). To convert to long tons, multiply by 0.893. To convert to metric tons, multiply by 0.907

PIPE FLANGE HYDRAULIC SPREADER - HFS

5 & 10 Ton Capacity 700 bar/10,000 psi



HFS PIPE FLANGE SPREADER

- You'll never again have to resort to "hammer and chisel" methods that waste time and effort. Flange spreaders should be used in pairs to proide even spreading force.
- Standard 60° wedge is suitable for most flanges; 30° "thin" and 60° "blunt" wedges are optional.
- The HFS3A is designed for applications where total thickness of flanges and max. Spread gap is 3" or less and flange bolts are a min. of 11/16" dia.
- Use HFS6A if total thickness of flanges and max.
 Spread gap is 6" or less, and flange bolts area min. of 13/16" dia.
- Max working pressure 700 bar (10,000 psi)
- Uses a standard 3/8" high flow coupler

Specifications and Dimensional Data 350823 350822 350549 350550 Optional Wedges Max. Flange Opening Min. Flange Opening Combined Flange Capacity Min. Wt Opening Standard 30° 30° 30° 60° 60° 60° 60° 60° Order Wedge Metric tons Short tons Nn mm mm mm Pin Dia. mm mm kg in Thin Blunt Std. Blunt Std. Blunt 4.5 1,6 25,4 1,6 38,1 38,1 18,3 76,2 17,4 4,1 HFS3A 60° Sharp 350823 350822 5 1/16" 1" 1/16" 1-1/4" 23/32" 3-1/2" 9 1-1/4" 11/16" 50.8 9 1.6 38.1 1.6 50.8 24.6 152.4 20.6 8.2 HFS6A 60° Sharp 350549 350550 10 1/16" 1-1/2" 1/16" 2" 31/32" 6-9/16" 13/16" 18

Value(s) shown in short tons (2,000 lb). To convert to long tons, multiply by 0.893. To convert to metric tons, multiply by 0.907.

EHN TOP COLLAR HYDRAULIC NUT


Our precision machined top collar hydraulic nuts offer a quick, accurate and cost effective solution to simultaneous tightening of multiple bolted joints.

In addition to standard features normally associated with hydraulic nuts, our system also provides the following benefits:

- Compact enough to fit the most confined spaces
- Maximum load generated at 1,500 bar (21,750 psi)
- Energized from either a hand operated or air driven pump
- Custom Hydraulic Nut designs available
- Alternative Bottom Collar and Shim type versions available
- Made to Order, Consult Factory

Note: Hydraulic Nuts will require minimum order quantity - consult factory for details.

HYDRAULIC NUTTOP COLLAR - EHN

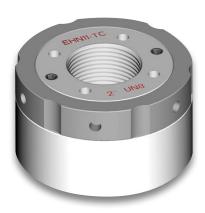

	Specifications and Dimensional Data													
To d Def	THR	EAD	INITIA	L LOAD	HYDRAU	LIC AREA	NUT I	DIAM.	HEI	GHT	STROKE			
Tool Ref.	Metric	in	kN	Ton F	mm²	in²	mm	in	mm	in	mm	in		
EHN1-TC	M20	3/4	180	18.07	1200	1.86	68	2.7	55	2.2	5	0.2		
EHN2-TC	M22	7/8	180	18.07	1200	1.86	68	2.7	55	2.2	5	0.2		
EHN3-TC	M24	1	195	19.57	1300	2.02	72	2.8	55	2.2	5	0.2		
EHN4-TC	M27	1-1/8	210	21.08	1400	2.17	75	3.0	55	2.2	5	0.2		
EHN5-TC	M33	1-1/4	250	25.09	1667	2.58	82	3.2	57	2.2	5	0.2		
EHN6-TC	M36	1-3/8	300	30.11	2001	3.10	88	3.5	57	2.2	5	0.2		
EHN7-TC	M39	1-1/2	340	34.12	2267	3.51	93	3.7	58	2.3	5	0.2		
EHN8-TC	M42	1-5/8	400	40.15	2667	4.13	100	3.9	62	2.4	6	0.2		
EHN9-TC	M45	1-3/4	460	46.17	3067	4.75	106	4.2	64	2.5	6	0.2		
EHN10-TC	M48	1-7/8	500	50.18	3334	5.17	110	4.3	64	2.5	6	0.2		
EHN11-TC	M52	2	560	56.20	3734	5.79	117	4.6	67	2.6	6	0.2		
EHN12-TC	M56	2-1/4	720	72.26	4801	7.44	128	5.0	74	2.9	8	0.3		
EHN13-TC	M64	2-1/2	900	90.33	6002	9.30	141	5.6	77	3.0	8	0.3		
EHN14-TC	M68	2-3/4	1000	100.37	6668	10.34	150	5.9	78	3.1	8	0.3		
EHN15-TC	M76	3	1200	120.44	8002	12.40	162	6.4	81	3.2	8	0.3		
EHN16-TC	M80	3-1/4	1400	140.51	9336	14.47	174	6.9	87	3.4	10	0.4		
EHN17-TC	M90	3-1/2	1600	160.59	10669	16.54	187	7.4	95	3.7	10	0.4		
EHN18-TC	M95	3-3/4	1700	170.62	11336	17.57	194	7.6	102	4.0	10	0.4		
EHN19-TC	M100	4	1900	190.70	12670	19.64	205	8.1	110	4.3	10	0.4		
EHN20-TC	M110	4-1/2	2200	220.81	14671	22.74	223	8.8	120	4.7	10	0.4		
EHN21-TC	M125	5	2400	240.88	16004	24.81	239	9.4	135	5.3	15	0.6		
EHN22-TC	M140	5-1/2	2900	291.06	19338	29.97	261	10.3	145	5.7	15	0.6		
EHN23-TC	M150	6	3400	341.24	22673	35.14	282	11.1	160	6.3	15	0.6		

NOTE: EHN#-TC" is not a part number that can be ordered please contact factory for ordering information.