SPXFLOW

Series 70 Mixers

TOP ENTRY MIXERS



>Lightnin[®]

A World Leader in Industrial Mixing since 1923, Lightnin has 90 years of unrivaled experience in industrial mixing technology, process knowledge, and technological innovation. Lightnin enjoys a global reputation for durable, long-lasting mixers, agitators, aerators, and flocculators for fluid process systems. We offer a full spectrum of impeller designs for diverse applications. In addition, we offer a worldwide service network, mixer repair, gearbox repair, and replacement parts programs. Look to Lightnin for knowledge, technology, and service excellence.

SPX FLOW, Inc. (NYSE:FLOW) is a leading manufacturer of innovative flow technologies, many of which help define the industry standard in the market segments they serve. From its headquarters in Charlotte, North Carolina, it operates a sales and support network, centers of manufacturing excellence, and advanced engineering facilities, throughout the world. Its cutting-edge flow components and process equipment portfolio includes a wide range of pumps, valves, heat exchangers, mixers, homogenizers, separators, filters, UHT, and drying technology that meet many application needs. Its expert engineering capability also makes it a premium supplier of customized solutions and complete, turn-key packages to meet the most exacting of installation demands. Incorporating many leading brands, SPX FLOW has a long history of serving the food and beverage, power and energy, and industrial market sectors. Its designs and engineered solutions help customers drive efficiency and productivity, increase quality and reliability, and meet the latest regulatory demands. In-depth understanding of applications and processes, state-of-the-art Innovation Centers, and advanced pilot/testing technology further assist in optimizing processes and reducing timescales to reliably meet production targets. To learn more about SPX FLOW capabilities, its latest technology innovations and complete service offerings, please visit www.spxflow.com.

The Most Experienced Mixer Technology In The World - Lightnin Series 70

Over 30,000 Lightnin Series 70 mixers have been placed in service since we began manufacturing them in 1970. The same design technology is used in Lightnin Series 90 Mixers, as well as in RMX and most CMX replacement drives for older mixers. The gear train is the same as in our Series 80 Mixers. That makes the Series 70 mechanical design technology our most specified, most widely used and reliable mixer technology. It's our standard and is accepted in all of the industries we serve.


PRODUCT BENEFITS AND FEATURES

- Wide Range of Power: Lightnin Series 70 Mixers cover the range from 0.75 - 150kW (1 - 200HP). They are available in both double and triple reduction gearing, and offer speeds from 280 down to 9 rpm.
- Motor Mounting Options: The 70 Series is available with a choice
 of motor mounting options to support your needs. For units up to 30kw
 (40HP) our default motor pedestal helps ensure simple motor alignment.
 A motor bracket is available for all sizes.
- **Full Spectrum of Impellers:** Series 70 Mixers offer a full choice of impellers in order to optimize your process results.
- **Variable Speed Drives:** The Lightnin Series 70 mixers can be driven with a variable frequency drive where speed variations are needed.
- Right Angle Gearbox Design: Due to the right angle gearbox the 70
 Series can be installed where head room may cause a restriction to other drives.
- Guaranteed Performance: Together we decide what mixing should do
 to optimize your process. Then we recommend the impeller, mixer speed,
 shaft length and other specifications. And we guarantee performance
 results that are backed up by our standard warranty.
- Tested 100%: We employ a non-load test run on every Series
 70 and Series 80 before they are shipped.

EXTENDED CHOICE OF SEALING OPTIONS


Our 70 Series now offers an extended choice of mechanical seals. Included as standards across our range are simple dry running single mechanical seals. Also available are double mechanical seals with integral bearings and of course our own Lightnin Cartridge seal. The extension of more mechanical seals across our range make the 70 Series even more configurable to meet your needs - as standard.

THEORY OF OPERATION:

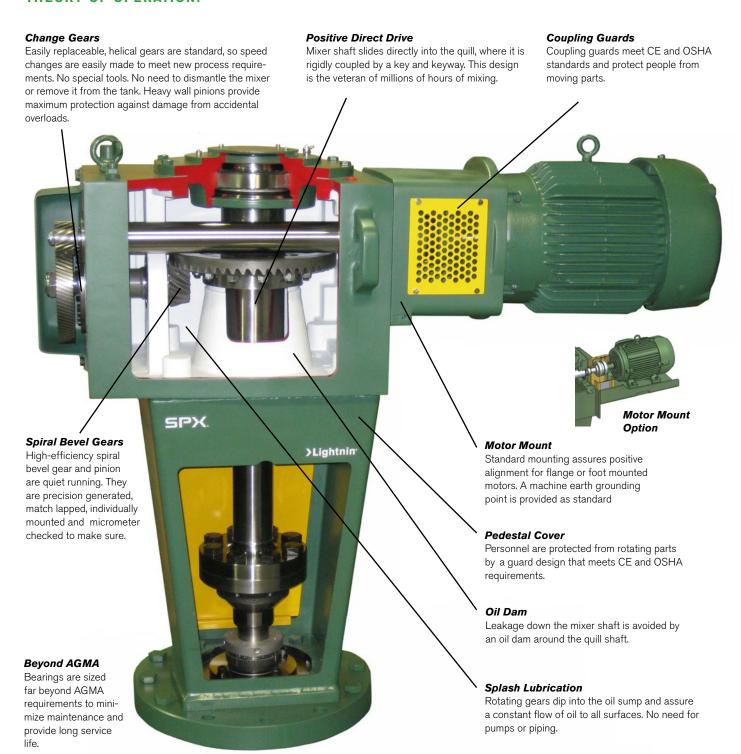

MECHANICAL SEALS

The replaceable cartridge design, a Lightnin original, is standard on Series 70 units. Light in weight. Easy to replace. Our design offers unrivaled convenience. Integral stuffing box and open tank designs also available. Each Lightnin Cartridge seal is still tested 100% prior to shipment and offers the very best in reliability while our other seal selection meet performance. Additionally we continue to supply low and high pressure stuffing boxes. All fits are dowel or rabbet to assure alignment. You'll find this Lightnin design makes for easy repacking.

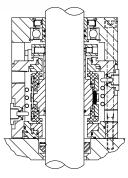

Double seal with integral bearing

TOP ENTRY MIXERS



LightninLube™

As part of our commitment to our Customers and their operations, SPX has introduced LightninLube™, a range of gear oil for our Lightnin Mixers. It is available to order with your new equipment or as a maintenance item throughout the life of your equipment.

LightninLube is manufactured to AGMA Standard 8005-D94. Our synthetic oils are designed to give you a wide operating range and are available in ISO 100, ISO 150, ISO 220 and ISO 320 grades.

Contact our Service department or your Sales Representative to discuss your needs.

SPX FLOW, Inc. - Global locations

USA 13320 Ballantyne Corporate Place

Charlotte, NC 28277 United States of America

+1 704 752 4400

CHINA

7F Nanfung Tower 1568 Hua Shan Road Shanghai 200052 China

P: +86 (21) 22085889

UΚ

Ocean House, Towers Business Park Didsbury, Manchester M20 2LY, UK

Downtown Jebel Ali The Galleries 4 Dubai, U.A.E.

P: +44 161 249 1170 P: +971 4 8143400

SPX FLOW, LLC - LIGHTNIN & PLENTY MIXERS

135 Mt. Read Blvd.

Rochester, NY 14611

P: +1 (888) 649-2378 (MIX-BEST), (US and Canada) or +1 (585) 436-5550

F: +1 (585) 436-5589

E: lightnin@spxflow.com • www.spxflow.com/lightnin

For other Sales locations, click www.spxflow.com/lightnin\contacts\where-to-buy\ or use your SmartPhone and the QR Code

MIDDLE EAST FZE

P.O Box 299745,



SPX FLOW, Inc. reserves the right to incorporate our latest design and material changes without notice or obligation.

Design features, materials of construction, and dimensional data, as described in this bulletin, are provided for your information only and should not be relied upon unless confirmed in writing. Please contact your local sales representative for product availability in your region. For more information, visit www.spxflow.com.

The green ">" and "X" are trademarks of SPX FLOW, Inc.