



DT4 Series

TANK OUTLET DOUBLE SEAT MIX PROOF VALVES





SPX FLOW is a leading innovator of process solutions with decades of experience in valve design covering premium brands, such as APV® and Waukesha Cherry-Burrell®. From the supply of engineered components to complete process engineering and design, we specialize in helping our customers improve their plant's performance and profitability.

SPX FLOW has developed the D4 series hygienic double seat mix proof valve to fulfil the demands of today's process industry. Installing D4 Series valves is an investment in efficiency, production flexibility and uptime. When designing this valve, great emphasis was placed on a rapid return on investment, safety and maintenance.

SPX FLOW, Inc. (NYSE: FLOW) is a leading manufacturer of innovative flow technologies, many of which help define the industry standard in the market segments they serve. From its headquarters in Charlotte, North Carolina, it operates a sales and support network, centers of manufacturing excellence and advanced engineering facilities, throughout the world.

Its cutting-edge flow components and process equipment portfolio includes a wide range of pumps, valves, heat exchangers, mixers, homogenizers, separators, filters, UHT and drying technology that meet many application needs. Its expert engineering capability also makes it a premium supplier of tailor-made solutions and complete turn-key packages to meet the most exacting installation demands.

Incorporating many leading brands, SPX FLOW has a long history of serving the food and beverage and industrial market sectors. Its designs and engineered solutions help customers drive efficiency and productivity, increase quality and reliability, and meet the latest regulatory demands. In-depth understanding of applications and processes, state-of-the-art Innovation Centers, and advanced pilot/testing technology further assist in optimizing processes and reducing time scales to reliably meet production targets.

To learn more about SPX FLOW capabilities, its latest technological innovations and complete service offerings, please visit www.spxflow.com.

DT4 Tank Outlet Mix Proof Valves

The next generation of mix proof valve technology is the result of continued development of both APV® and Waukesha Cherry-Burrell® process technologies. Used for the reliable separation between the tank and servicing pipeline, the DT4 tank outlet is an extension to the D4 Series mix proof family which helps fulfil today's customer demands for production flexibility, increased productivity, rapid return on investment (ROI) and improved product quality in the food & drink, dairy, personal care and brewing process industries.

FEATURES AND BENEFITS

High value, Low life cycle costs:

- "All-In" standard features such as seat lift actuator and cross-port housing provide exceptional value
- Reduced inventory costs with same seal kit used on multiple size ranges such as one kit for 1.5" - 3.0" sizes
- Low air consumption and air supply requirements
- Leak drain with clamp connection for CIP fluid collection
- Long housing ports ease manifold building
- Integrated shaft seal flush reduces need for external piping

Reliable performance:

- Design based on the proven D4SL model
- Tank side holding pressure greater than 73 psi
- Long stroke for gentle product handling (ex: particulates) and low flow resistance
- Balanced design helps to prevent hydraulic blocking and enables flexible flow direction without slamming
- Heavy-duty bolted flange connection between tank/housing/insert provides secure, controlled assembly/disassembly of valve insert
- No compressed air needed for removal and servicing
- Range of control units and bus communication for automated operation

Cleanability:

- Designed to the latest global hygienic standards
- Cavity spray cleaning as standard
- Radial seal design provides minimal switching leakage
- Extensive cleaning of product contact seals


TECHNICAL DATA

TECHNICAL DATA									
SIZES	OD Tube 1.5" - 4"								
HOUSING TYPES	T42								
PRODUCT- WETTED PARTS	1.4404/AISI 316L Other stainless steel parts 1.4301/AISI 304								
SEAL MATERIALS	EPDM, HNBR, FPM All seals comply with the FDA requirements								
SURFACES	Inside: electropolished Ra 32 μ-in Outside: Glass-blasted, satin finish								
PRODUCT PRESSURE	Max. Pipeline: 145 psi Tank Holding: >73 psi								
MAX. TEMPERATURE	EPDM & HNBR: 275°F (for short time 284°F) FPM 275°F (not to be used for steam)								
STERILIZATION TEMPERATURE	EPDM & HNBR: (for short time) 284°F								
REQUIRED AIR PRESSURE	73 psi, valve normally closed								

THEORY OF OPERATION:

Double seat mix proof valves are used to safely process two different fluids efficiently (typically product and CIP) through the valve simultaneously. The DT4 mix proof design has two independently operating seats that separate the tank and pipeline when the valve is in the fail-safe closed position. The atmospheric vent cavity between the seats creates a path to exit through the leakage chamber should the seals fail, as well as a drain for CIP solution during seat cleaning. External CIP spray flush connections are included to provide enhanced cleaning of the leakage vent cavity as well as the lower shaft, while the valve is closed or open during production.



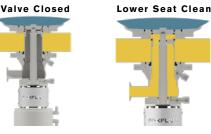





HOUSINGS



T42

CONTROL UNITS CU4 & CU4plus Series



FEATURES AND BENEFITS

- Automated control and position monitoring for reliable processing
- Reduces compressed air needs and electrical connections
- Helps reduce external solenoid valve cabinets
- Accelerates valve response time
- Reliable and long service life robust clamp connection, water tight seals and reinforced stainless steel air coupling threads to avoid air leakages
- · Ease of operation contains manual override solenoids and adjustment screw to throttle air flow to actuator to ensure optimal opening and closing
- Clarity clear and bright indication of valve position 5 diodes in LED panel and convenient location
- Standardisation same control top used on various SPX FLOW valve lines, offers common look and control interface
- IP67 (NEMA 6) wash-down rating

CONNECTOR OPTIONS

- S/O Cord Grip for hard wire (std)
- M12 pin connectors (optional)

INTERFACE OPTIONS

- 24V DC Direct Connect
- AS-i Field Bus Card

POSITION INDICATION OPTIONS

- CU4: 2 internal feedback sensors for valve open/valve closed position detection
- CU4plus: Automatic teaching with press of a single button and detection of all positions (open, close, upper/lower seat lifts)

SOLENOID VALVES

- 24V DC
- Select 1 (non-seat lift) or 3 Solenoids (seat lift)

Personal Care and Pharmaceutical

Fluid Medicines

Extracts

Typical product applications

Face Creams & Lotions

Perfumes

Soaps

High Purity Water

Nutritional Supplements

Hair Styling Gels & Liquids

Dyes & Alcohols



Food and Drinks

Dressings, Vinegars

Brewery, Wort, Wine

Fats & Oils, Animal Oils

Pet Food

Cereals

Liquid Sugar

Flavorings & Ingredients

Soft/Fruit & Vegetable Drinks

Soups & Sauces

Chemical

Solvents, Paints

Adhesives

Coatings

Oils & Lubricants

Detergents

Emulsions

Fuels



DT4 Series Tank
Outlet Double Seat
Mix Proof Valves

SPXFLOW

PRODUCT DIMENSIONS

DT4 SL



DIMENSIONS IN	A1	В	ØDi	ØDi drain	ØE	F	G	н	к	L1	Х*
INCH											
1.5	23.6	1.8	1.4	1.0	5.4	4.9	3.5	1.3	3.8	25.5	3.9
2.0	24.4	2.1	1.9	1.0	5.4	4.9	3.5	1.5	4.0	26.4	3.9
2.5	25.0	2.2	2.4	1.0	5.4	4.9	3.5	1.6	4.3	27.2	3.9
3.0	25.3	2.5	2.9	1.0	5.4	4.9	3.5	1.9	4.5	27.7	3.9
4.0	28.1	3.1	3.8	1.5	7.6	5.6	5.8	2.4	5.1	31.2	5.9

^{*}Minimum installation and valve insert removal dimensions

Global location

SPX FLOW

611 Sugar Creek Road

Delavan, WI 53115

USA

+1 262 728 1900



Based in Charlotte, North Carolina, SPX FLOW, Inc. (NYSE: FLOW) is a multi-industry manufacturing leader. For more information, please visit www.spxflow.com

SPX FLOW, Inc. reserves the right to incorporate our latest design and material changes without notice or obligation.

Design features, materials of construction, dimensional data and certifications as described in this bulletin, are provided for your information only and should not be relied upon unless confirmed in writing. Please contact your local sales representative for product availability in your region. For more information visit www.spxflow.com.

Version: 01/2021

The green ">" and "x" are trademarks of SPX FLOW, Inc.

Identification Number: DS-1235-US

 $WCB_Valves\text{-}Mix\text{-}Proof\text{-}Tank\text{-}Outlet\text{-}DT4_DS\text{-}1235_DST_US$

COPYRIGHT © 2021 SPX FLOW, Inc.